

Manuales - Digital secuencial

Contadores

- **4029**
 - National Semiconductor [[📄 CD4029BM/CD4029BC](#)]
 - Motorola [[📄 MC14029B](#)]
 - Philips [[📄 HEF4029B](#)]
- **4510 / 4516**
 - National Semiconductor [[📄 CD4510BM/CD4510BC, CD4516BM/CD4516BC](#)]
 - Motorola [[📄 MC14516B](#)]
 - Philips [[📄 HEF4516B](#)]

Registros

- **74194**
 - Fairchild [[📄 DM74LS194A](#)]
 - Motorola [[📄 SN54/74LS194A](#)] [[📄 SN54/74LS194A](#)]
 - National Semiconductor [[📄 MM54HC194/MM74HC194](#)] [[📄 54LS194A/DM74LS194A](#)]
 - On Semiconductor [[📄 SN74LS194A](#)]
 - Philips [[📄 74F194](#)]
 - Texas Instruments [[📄 74194](#)]

From:
<https://euloxio.myds.me/dokuwiki/> - **Euloxio wiki**

Permanent link:
https://euloxio.myds.me/dokuwiki/doku.php/doc:tec:elo:dat_dig_secuencial:inicio

Last update: **2021/12/25 03:01**

