

[LAB] Soldadura: Pistola de aire caliente 858D



1. Manual de usuario

When using status:

1. The temperature of the soldering iron head is between 180 °C and 500 °C.
2. The temperature of the air nozzle of the air gun is between 100 °C and 500 °C.
3. The limit switch inside the air gun handle will automatically sleep when the air gun mouth is horizontally placed or facing up. When the air gun mouth is facing down, it can be used normally

Precautions. Considering that abuse may cause burns or fire hazards, please strictly follow the following precautions:

- Do not use this machine near gas, paper, or other flammable objects.
- When replacing the heating core material, the model must be the same. Install the heating wire according to the reverse process when disassembling.
- When replacing components, turn off the power and cool to room temperature.

From:
<https://euloxio.myds.me/dokuwiki/> - Euloxio wiki

Permanent link:
https://euloxio.myds.me/dokuwiki/doku.php/doc:tec:lab:soldar:soldar_858d:inicio?rev=1791648797

Last update: 2026/10/10 18:13

